


## Keypad Navigation

The diagram below shows how to use the keypad when in programming mode. It applies to both Scrolling and Non-Scrolling Directory keypads.

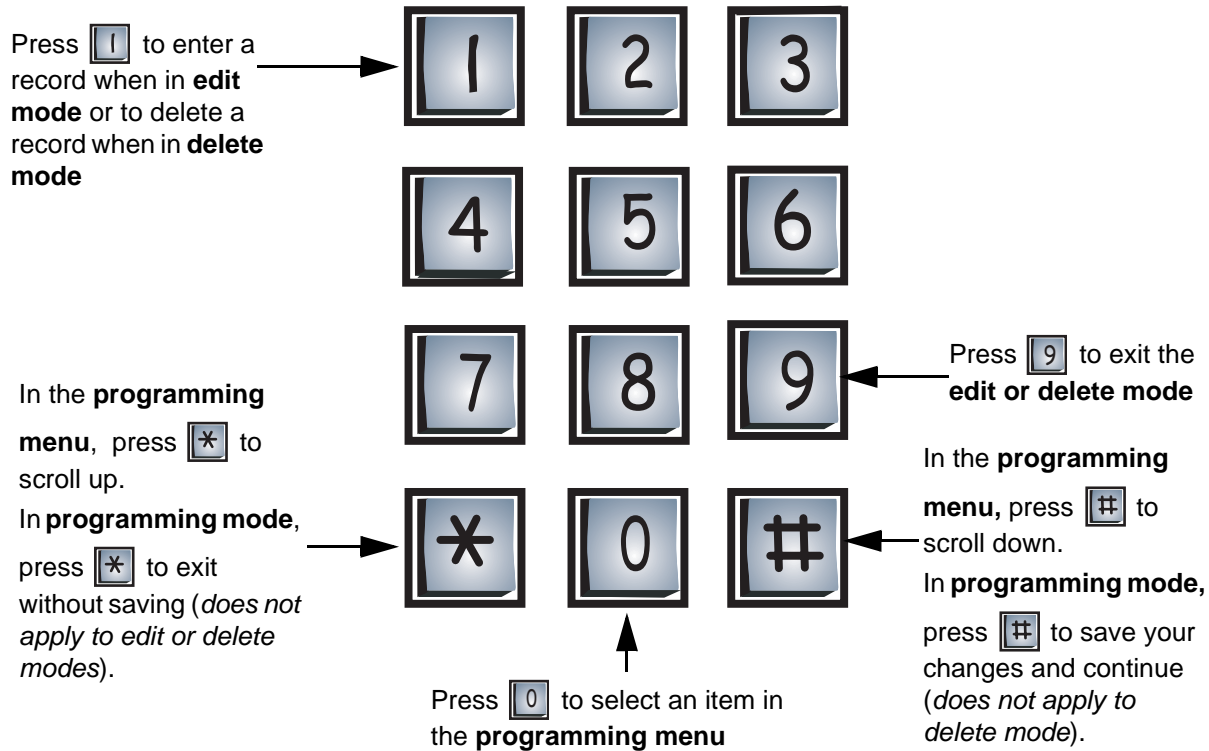

**Note:** If you are programming a function and do not enter information for three minutes, the display will return to the programming menu without saving your changes. If you are in the programming menu for 3 minutes, the display will return to the main screen.

## Entering Programming Mode



**Note:** Before programming the system, make sure you have filled out the Resident Directory Worksheet on page 29.

To make changes to either scrolling or non-scrolling directories, you must first enter programming mode.

**Entering Programming mode**

Enter the Password  
[ \_ \_ \_ \_ \_ ]

 


1. Press **9 9 9 9**.
2. Enter the password.

- If you *have not* set a personal password, press **1 1 1 1 1 1 1 1 1 1** (ten-digit factory default).
- If you *have* set a personal password, enter your 10-digit password.

You are now in programming mode.

## Exiting Programming Mode

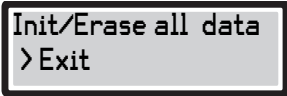To exit programming mode, you must first be in the programming menu. If you are not in the programming menu, use the keypad navigation diagram to exit from the mode you are currently in.

| Exiting Programming Mode  |   |
|---|---|
|  | <ol style="list-style-type: none"><li>1. Press  to scroll down until the arrow is beside "Exit".</li><li>2. Press  to select.</li></ol> |