







Changing Your Password

To change your password, you must be in **Programming Mode**. Refer to *Entering Programming Mode* on page 2 for instructions.

Step 1: Select "Change Password"	
	<ol style="list-style-type: none">1. Press  (scroll up) or  (scroll down) to find "Change Password".2. Press  when the arrow is beside "Change Password". The display enters Change Password setup.

Step 2: Change your password	
	<ol style="list-style-type: none">1. Enter your new password. It must consist of 10 digits. The factory default is "1111111111".2. Press  to save and continue.

You have successfully changed your password. The display now returns to the programming menu.