

## Limited Warranty

Mircom warrants that for a period of five years from the date of purchase, the product shall be free of defects in material and workmanship under normal use and that in fulfillment of any breach of such warranty, Mircom shall, at its option, repair or replace the defective equipment upon return of the equipment to its repair depot. This warranty applies only to defects in materials and workmanship and not to damage incurred in shipping or handling, or damage due to causes beyond the control of Mircom such as, lightning, excessive voltage, mechanical shock, water damage or damage arising out of abuse, alteration or improper application of the product.

The foregoing warranty shall apply only to the original buyer, and shall be in lieu of any and all other warranties, whether expressed or implied and of all other obligations or liabilities on the part of Mircom. This warranty contains the entire warranty. Mircom neither assumes responsibility for, nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product.

In no event shall Mircom be liable for any direct, indirect or consequential damages, loss of anticipated profits, loss of time or any other losses incurred by the buyer in connection with the purchase, installation or operation or failure of this product.

### **Important!**

Mircom recommends that the entire system be completely tested on a regular basis. However, despite frequent testing and due to but not limited to, criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.



LT-2018MIR Rev. A

### **Canada**

25 Interchange Way  
Vaughan, ON, L4K 5W3  
Tel: (905) 695-3545  
Fax: (905) 660-4113  
www.mircom.com

### **USA**

60 Industrial Parkway PMB 278  
Cheektowaga, NY, 14227  
Tel: 1-888-MRCOM5  
Fax: 888-660-4113

# INSTALLATION INSTRUCTION



## RM-263 Relay Module

The RM-263 relay module includes three relays with form 'C' contacts rated at 30VDC, 2A. Each relay is jumper programmable to activate on 'Alarm', 'Supervisory' or 'Trouble' mode. Refer to FA-262 or FA-265 *Installation Manual*.

### Parts List

- Qty 1 RM-263 module
- Qty 1 #4-40 pan head screw
- Qty 1 spacer
- Qty 3 jumpers

### Specifications

- Standby current ... 0 mA  
Add 8 mA for each relay programmed for 'Trouble'
- Alarm current ... 8 mA (for each relay programmed for alarm).
- Relay contacts Vmax ... 30VDC
- Relay contacts Imax ... 2 A

**NOTE: This component must be included in the control panel battery calculation. Refer to the Standby Battery Calculation Sheet included with the control panel.**


## Installing the RM-263 Module

The RM-263 module mounts on the FA-262/265 fire alarm control unit board as indicated below. Refer to Fig 1.

1. Screw the the 1/2 inch nylon hex spacer (provided) hand-tight onto the center pem stud.
2. Insert the the RM-263 header pins into the header on the FA-262/265 FACP.
3. Secure the relay module to the nylon spacer using the #4-40 screw provided.
4. Configure jumper for desired operating modes. Refer figure 1.
5. Route 14-18 AWG hookup wire through the panel access holes in accordance with local regulations.
6. Secure wire connections to relay terminals as required.
7. Refer to FA-262 or FA-265 *Installation Manual* for programming details.

# RM-263 RELAY MODULE INSTALLATION



## Jumper Configuration

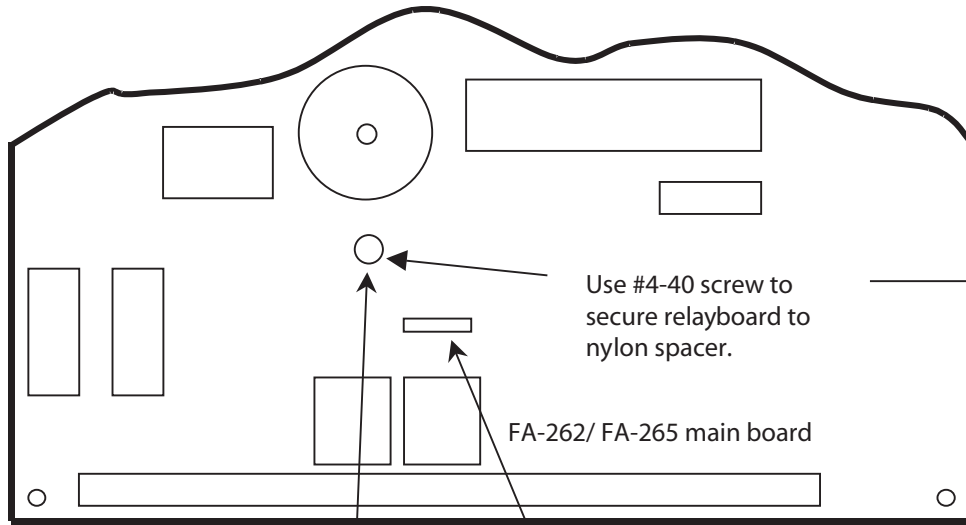

Screw nylon spacer onto this stud.

RM-263 header pins insert into header socket on main PC board

Refer to FA-262 or FA-265 Fire Alarm Control Unit Manual for further details.

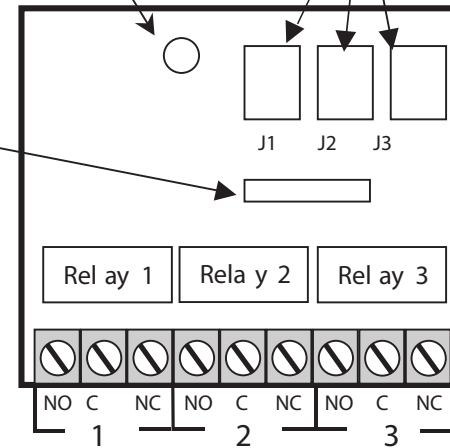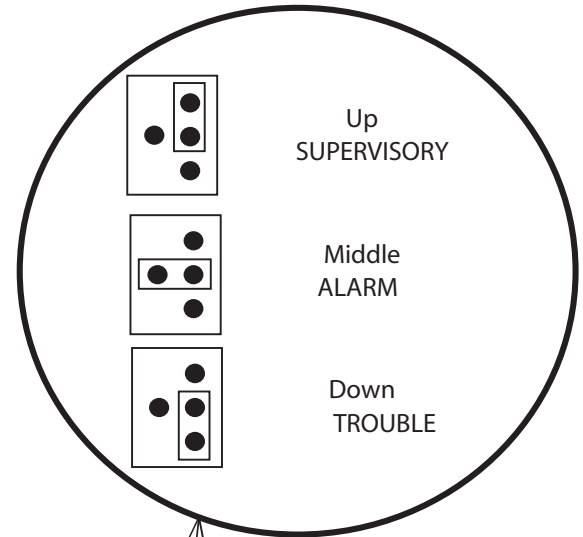

Note:  
J1= Relay 1  
J2 = Relay 2  
J3 = Relay 3

Wire Gauge  
14-18 AWG

Note:  
Connect relay contacts to a power limited source