




Setting the Online and Door Timers

To set the online and door timers, you must be in **Programming Mode**. Refer to *Entering Programming Mode* on page 2 for instructions.

Online Timer setup

Step 1: Select Online Timer setup


```
>Online Timer
  Door Timer
```

1. Press  (scroll up) or  (scroll down) to find "Online Timer".
2. Press  when the arrow is beside "Online Timer". The display enters Online Timer setup.

Step 2: Set Online Timer

```
Online Timer
[ 0060 ]
```

You can now set the length of time that a visitor may talk with a resident.





1. Enter time duration between 0 to 9999 seconds. The factory default is 60 seconds.
2. Press  to save and continue.

You have successfully set up the online timer. The display now returns to the programming menu.

Door Timer setup

Step 1: Select Door Timer setup


```
Online Timer
>Door Timer
```

- If you have just set up Online Timer, the arrow is now pointed beside "Door Timer". Press  to enter Door Timer setup.
- If you have not just set up Online Timer,
 1. Press  (scroll up) or  (scroll down) to find "Door Timer".
 2. Press  when the arrow is beside "Door Timer". The display enters Door Timer setup.

Step 2: Set Door Timer

```
Door Timer
[ 20 ]
```

You can now set the length of time the door release stays unlocked.

1. Choose a time duration between 0 and 99 seconds. The factory default is 20 seconds.
2. Press  to save and continue.

You have successfully set up the door timer. The display now returns to the programming menu.