TX3-MDM Modem Module Installation Instructions

The TX3-MDM Modem Module mounts above the **TX3 Telephone** or **Card Access controller boards** in the locations shown below, using the four # 6-32 screws and spacers provided. The TX3-MDM ribbon cable connects to the **P4** modem connector on the **Telephone Access System main board** and to the **P3** modem connector on the **Card Access System main board**.

To install the TX3-MDM Modem Module

1. Connect the ribbon cable to the **P3** or **P4** modem connector, then place the board over the connector position with the four spacers.

2. Align and fasten into place with the four screws.

3. Connect the telephone line to the RJ-11 or the Tip and Ring connectors as shown.

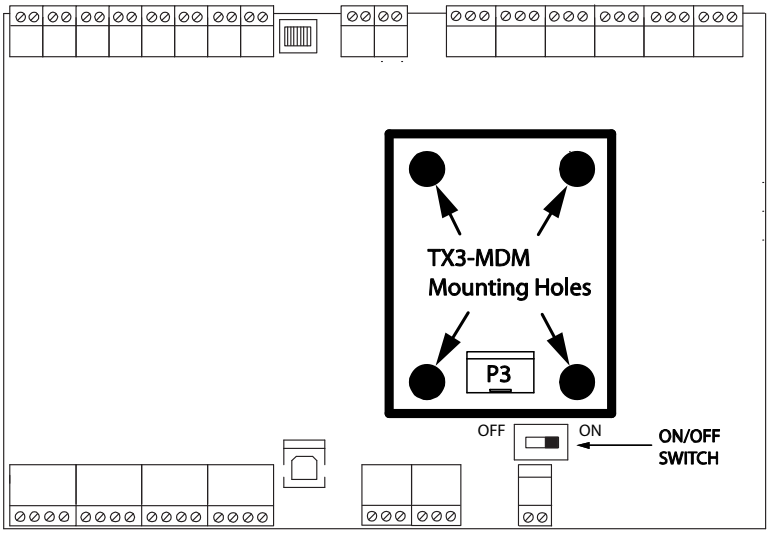

Card Access System

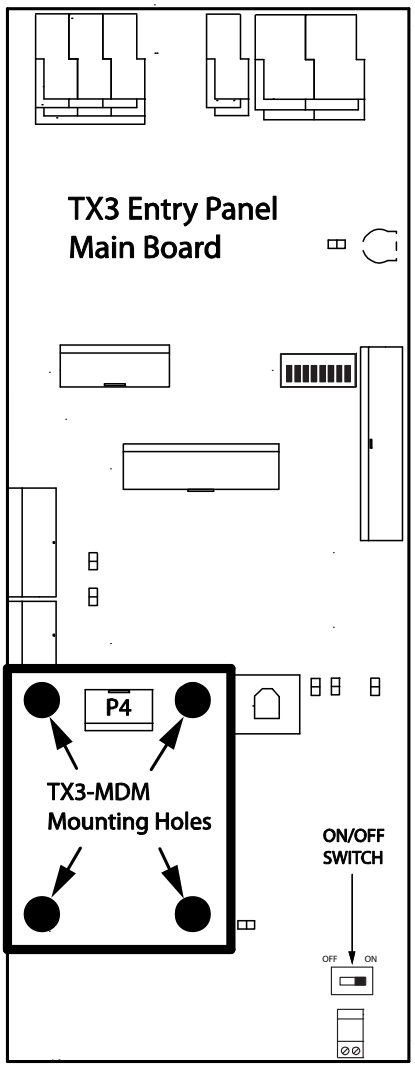

Telephone Access System

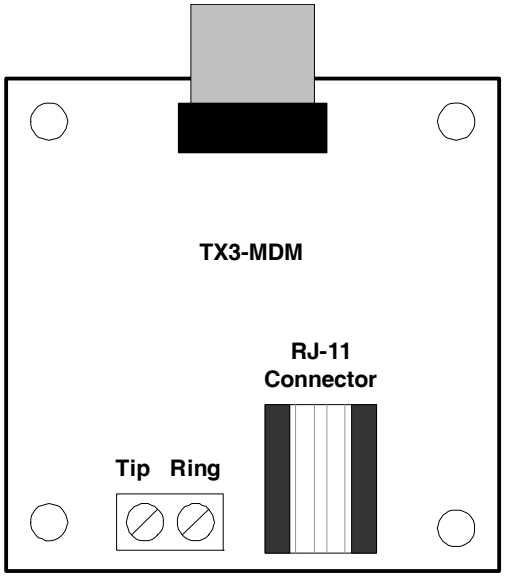

Modem Module Telephone Connectors

The modem module has two telephone connectors, an RJ-11 connector and a terminal block as shown. The terminal block T/R line is polarity insensitive and reversible.